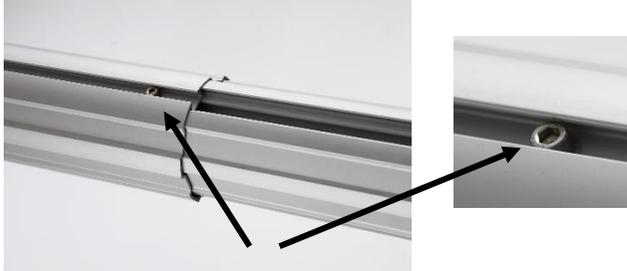


Supreme Reel Installation Instructions

 <p>6mm Socket Cap</p>	<p>TUBE SET: Consists of one outer and 2 inner tubes. To position outer tube, unlock 6 x 6mm socket cap and extend inner tubes to desired length. A 6mm allen key is provided in the parts bag. When the whole tube is at the required length, tighten the socket caps.</p> <p>Do not extend the inner tubes beyond the max. label on the side of the tube.</p>
	<p>Move the reel to cover straps, which are already fitted to the tube, to the required positions. Make sure the gaps between the straps are equal. Turn the slotted plastic fitting to tighten the strap to the tube. Hand tight only. Do not over tighten.</p>
 <p>White plastic peg</p>	<p>STAND SET: Each stand set comes with 2 stainless stands, 2 steering wheels with boss insert for the tube and a bag of fittings for the reel and cover, which includes 4 self tapping screws to secure the steering wheel to the tube. Push the steering wheels into the tube at each end and with a small adjustable spanner, fix 2 screws at each end. They are all pre-drilled for ease of installation.</p> <p>RETRO-FIT SMARTGEAR The SmartGear will be supplied with another yoke and stainless peg. Replace the old yoke with the new one as the SmartGear has a cut out which slots over the peg.</p>
<p>N.B. White plastic peg as shown above is now a stainless one</p>	<p>REEL TO COVER STRAPS: Please see over for instruction on how to install the reel to cover straps</p>

HOW TO INSTALL THE REEL TO COVER STRAPS


The long straps are already attached to the reel. Loosen the nuts with the supplied allen key (in short strap pack) and slide along the tube, keeping an even interval between each strap. Tighten up when happy with the position of each one.

The short strap pack is in the Stand box and also includes 9 each of short straps, SmartClic connectors and buckles. There is one short strap made up with a SmartClic and buckle attached as an example. See further below for the method of fixing SmartClic and short strap to the cover.

Once both parts of the straps are attached to the solar cover and reel, thread the long strap through the buckle and adjust the length of each one to ensure that the cover will be pulled evenly onto the reel. The buckle is a snap release so that the cover can be easily detached from the reel.



Complete reel to cover strap set

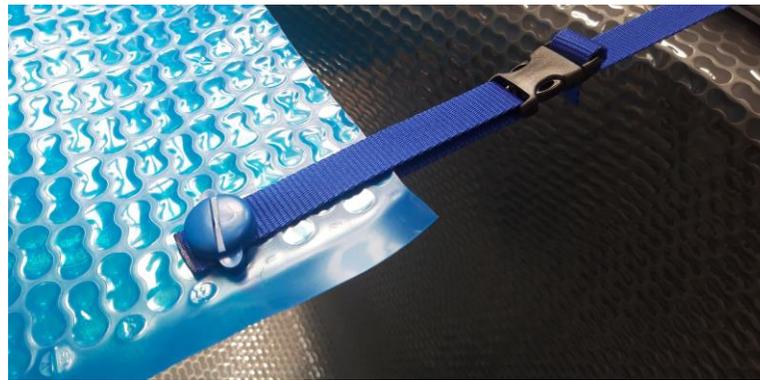

Top of solar cover



Bottom of solar cover



Join SmartClic screw and 2-prong parts together and push through the solar cover to make the holes.

Remove from the cover and put the screw through the hole in one end of the short strap, thread strap through buckle, place back over the hole already made in the cover and push through.

On the underside of the cover insert screw through the hole in the other end of the short strap. Make sure the strap isn't twisted.

Line up the 3rd part of the SmartClic underneath and screw tightly together.