


R32 Full-inverter Dehumidifier
INSTALLATION & USER MANUAL

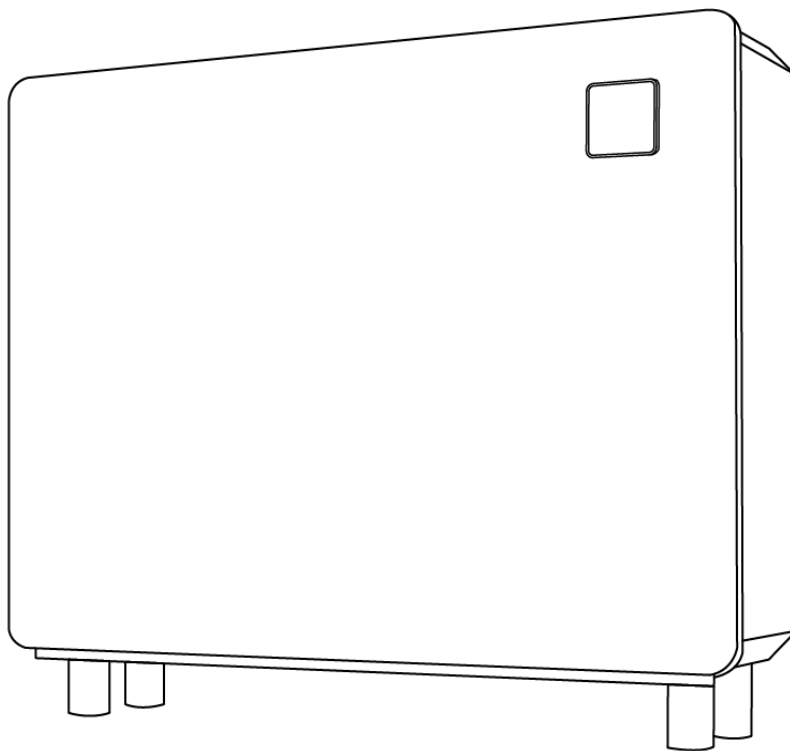

SUMMARY

For users P.3-P.9

1. GENERAL INFORMATION	5
1.1. Name of Parts	5
1.2. Spare Part Lists	6
1.3. Dimension	6
2. OPERATION	7
2.1. Instruction for Controller	7
3. TECHNICAL SPECIFICATION	11

For installers and professionals P. 10-P.26

1. Installation and Maintenance	12
1.1. Notice before installation	12
1.2 Instruction	15
1.3 Trail after Installation	19
1.4. Daily Maintenance Notice	20
2. TROUBLE SHOOTING FOR COMMON FAULTS	20
3. FAILURE CODE	21
4. WI-FI SETTING	22

PLEASE READ CAREFULLY AND SAVE FOR USE.

THIS MANUAL GIVES YOU THE NECESSARY INFORMATION FOR OPERATION AND MAINTENANCE.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Warning:


- a. Please read the following tips before installation, use and maintenance.
- b. Installation, removal and maintenance must be carried out by Professionals in accordance with the instructions.
- c. Gas leakage test must be done before and after installation.

1. Use


- a. It must be installed or removed by professionals, and it is forbidden to dismantle and refit without permission.
- b. Don't put obstacles before the air inlet and outlet of the dehumidifier.

2. Installation


- a. This product must be kept away from any source of fire.

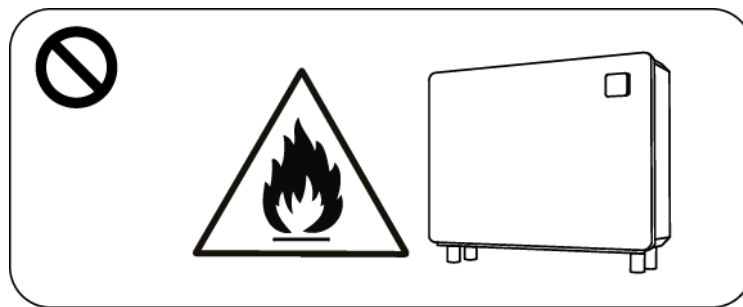


- b. The installation place must be kept well ventilated.

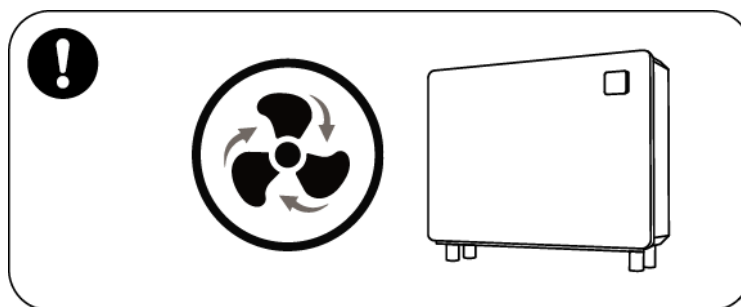

- c. Vacuum completely before welding, field welding is not allowed, welding can only be performed by professional personnel in professional maintenance center.

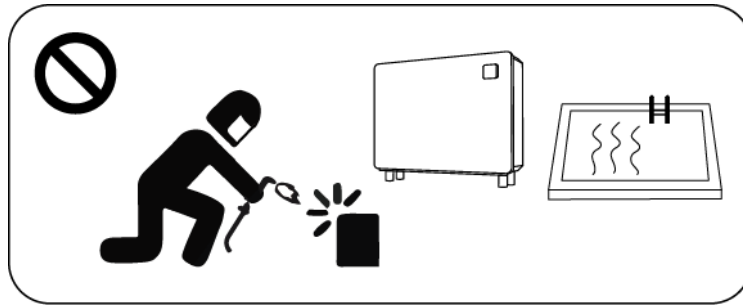

- d. Installation must be stopped if any R32 gas leakage, and the unit must be returned to professional maintenance center.

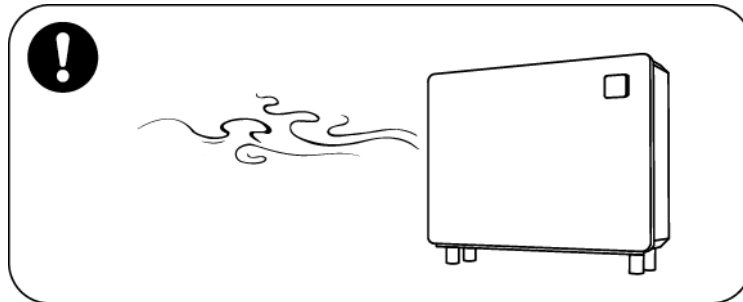

3. Transportation and Storage


- a. Sealing is not allowed during transportation
- b. Transporting goods at a constant speed is needed to avoid sudden acceleration or sudden braking, so as to reduce the collision of goods.
- c. The unit must be far away from any source of fire.
- d. Storage place must be bright, wide, open and good ventilation, ventilation equipment is required.

4. Maintenance Notice

- a. If maintenance or scrap is required, contact an authorized service center nearby
- b. Qualification requirement
All operators who dispose refrigerant gas must be qualified by valid certification which issued by professional agency.
- c. Please strictly comply with the requirement from manufacturer when maintenance or filling R32 refrigerant gas. Please refer to the technical service manual.

1. GENERAL INFORMATION


1.1. Name of Parts

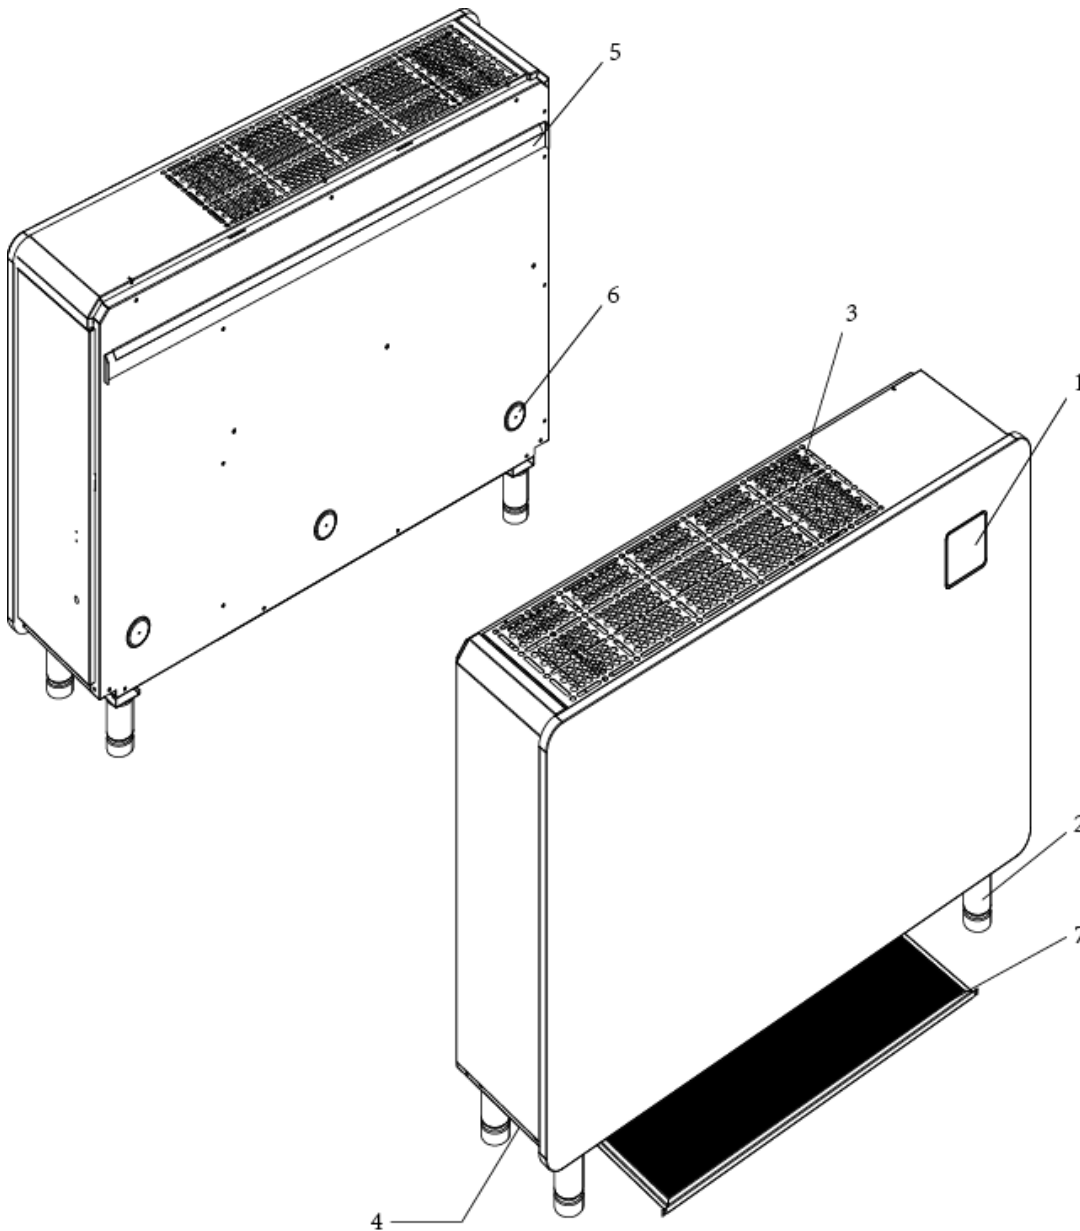


No.	Name
1	Controller
2	Feet
3	Air Outlet
4	Air Inlet (on the bottom)
5	Hanging Strip on Wall
6	Pad
7	Filter and filter bracket

1.2. Spare Part Lists

Padx3, Feetx4, Drain-pipe x1(2m), Hanging Stripx1, Manual

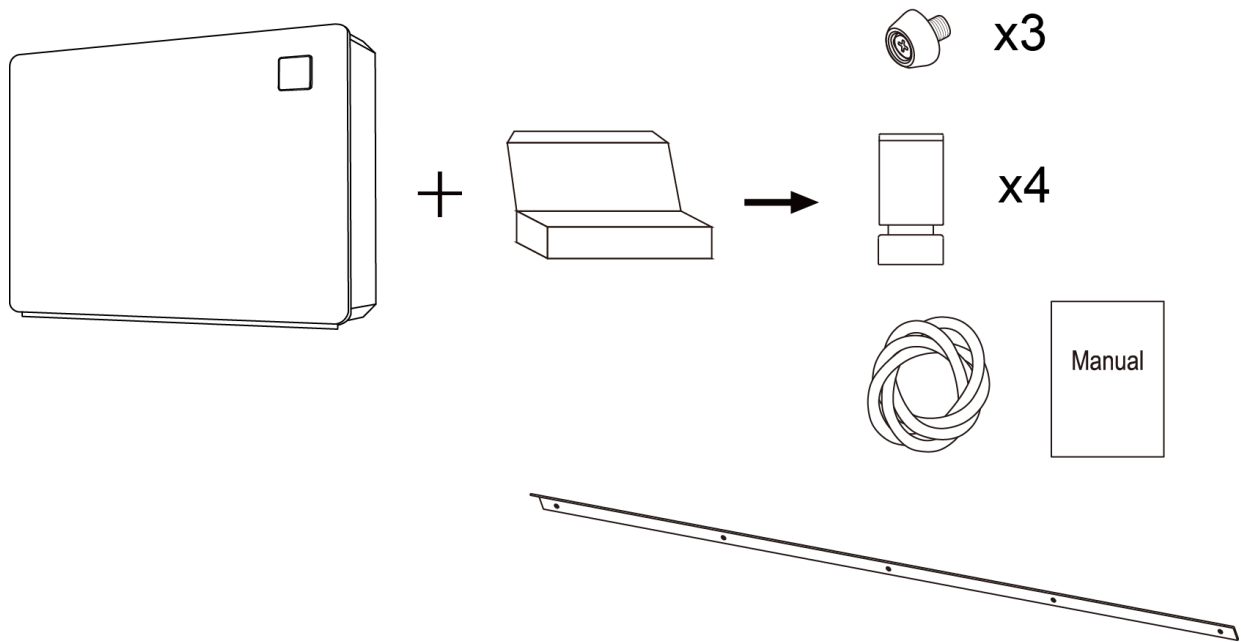

1.3. Dimension

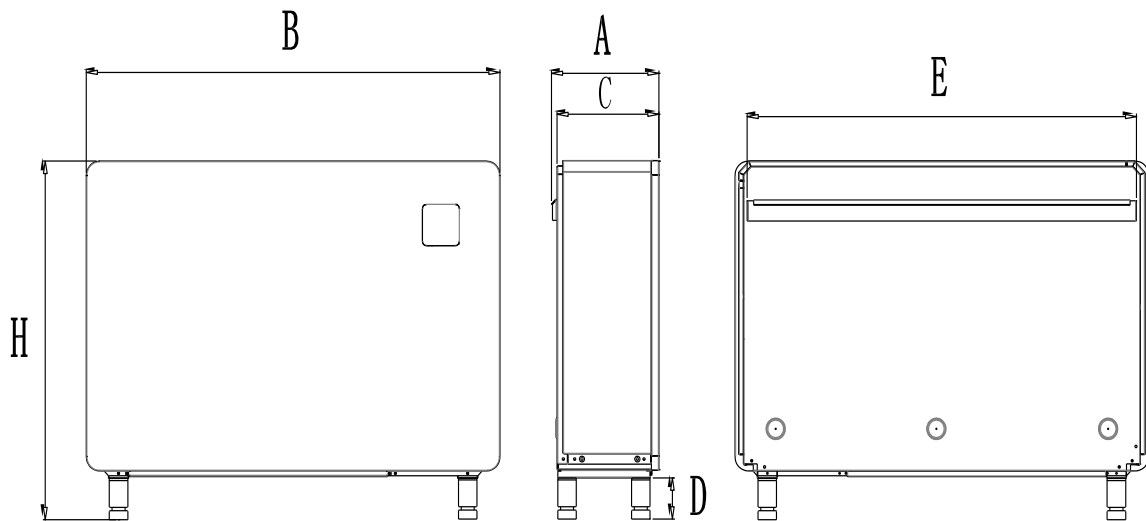

Size(mm) / Name / Model	A	B	C	D	E	H
OXID40E	291	850	276	100	784	870
OXID60E	291	1120	276	100	1054	870
OXID80E	291	1220	276	100	1154	870

2. OPERATION

2.1. Instruction for Controller



SYMBOL	DESIGNATION	FUNCTION
	ON/OFF	Press to power on or off the dehumidifier
	Mode	<p>1. For dehumidifier with dehumidifying function only, press ""</p> <p>to select Smart /Silence mode.</p> <p>2. For dehumidifier both with dehumidifying and heating functions (dehumidifier with optional electric heater), press the "" button for 3 seconds to select the mode:</p> <p>"Heating"</p> <p>"Dehumidification"</p> <p>"Heating + Dehumidification"</p>
	Timer	Press to set the time to switch on and off
	Up and Down	Adjust the value of the required parameters

1. When the dehumidifier it's on, press any button to light the keyboard and operate it.









When it's off, press to light the keyboard and operate it.





2. Mode Button

(1) Dehumidifying Function only: Press one time, it can transfer or mode.

Default is smart mode

(2) Both Dehumidifying and Heating Function:



Press  for 3 seconds, the  or  or  will flash, before it stops flashing, press  to choose  or  or  circularly, which means "Heating" "Dehumidifying" "Heating + Dehumidifying".

A. Dehumidifying Function: Press  one time, it can transfer the mode between  and . Default is  mode.



B. Dehumidifying and Heating Function: Press  one time, it can transfer the mode between  and . Default is smart  mode.



3. Humidity/Temperature Setting







(1) Dehumidifying Function only:


Press  or  to set the humidity. The humidity setting range is 30-95%. The default is 70%.

(2) Both Dehumidifying and Heating Function:

A. Under the dehumidifying mode, press  or  to set the humidity. The humidity setting range is 30-95%. The default is 70%.












































B. Under the heating mode, press  or  to set the temperature. The temperature setting range is 18~35°C. The default is 26 °C.

C. Under the heating + dehumidifying mode, press the  for the first time, the humidity number flashes, press  or  to set the desired humidity. Automatically confirm and exit after 5 seconds without button operation. Press , the temperature number flashes, press  or  to set the desired temperature before the flashing stops and automatically confirm and exit after 5 seconds without the button operation.



4. The  symbol will be displayed on the screen when the electric heater is turned on. Under the heating + dehumidifying mode, when the compressor operating frequency is below 50%, the electric heating will run at 100% output power; when the compressor operating frequency is above 50%, the electric heating will run at about 70% output power. (Remark: heating function is available only with electric heater)

(Note: When the outlet temperature is $\geq 65^{\circ}\text{C}$, it will enter the air outlet overheat protection system and stop (compressor and electric heating will stop). When the outlet temperature is $\leq 50^{\circ}\text{C}$, the protection will withdraw and normal operation will resume)

5. Timer Setting

- (1) Timer ON setting: When the dehumidifier is on or off, press the “” to enter the timer setting; Meanwhile, the symbol  light and the  are flashing to enter the Timer ON setting. Press the  and  to adjust Timer ON hour setting, then press , you can adjust the minute setting by pressing  or , then press the  for three times, the  will keep lighted, Timer on setting completely. (If you don't press  or  to adjust the time, timer setting will fail then withdraw automatically.)
- (2) Timer OFF setting: When the dehumidifier is on or off, press the  to enter the timer setting; Meanwhile, the symbol  light and the  are flashing. Press  two times to enter the Timer OFF setting, the  is flashing, you can adjust the hour setting by pressing the  and , then press again the , then you can adjust the minute setting by pressing  or , and press the , the  will keep lighted, the Timer off setting completed. (If you don't press  or  to adjust the time, time setting failed then withdrawal automatically.)
- (3) Timer ON and OFF setting: When the dehumidifier is on or off, press the  to enter the timer setting; Meanwhile, the symbol  light and the  are flashing to enter the Timer ON setting. Press the  and  to adjust Timer ON hour setting, then press , you can adjust the minute setting by pressing  or . Press the  to enter timer off setting, the  is flashing, you can adjust the hour setting by pressing the  and , then press again the , then you can adjust the minute setting by pressing  or , press  to confirm the status then exit, the  and

 will keep lighted all the time.

- (4) Method of cancelling timer function: Press the  to enter the timer setting. After Timer ON or Timer OFF setting, you can press directly the  without adjusting the setting time in order to cancel timing function setting.

6. Wi-Fi setting

Please kindly check the last page.

3. TECHNICAL SPECIFICATION

Model	OXID40E	OXID60E	OXID80E
Advised pool surface (m ²) *	≤25	≤40	≤50
Advised room size (m ²) *	60~120	90~180	120~240
Operating air temperature (°C)	10~38		
Capacity (l/h) (Air 30°C, RH 80%) *	2.5	4.0	5.0
DER (l/h.kW) (Air 30°C, RH 80%) *	4.00~3.40	4.53~4.05	4.50~3.68
Capacity (l/h) (Air 30°C, RH 70%) *	2.1	3.3	4.2
DER (l/h.kW) (Air 30°C, RH 70%) *	3.34~3.00	4.00~3.50	3.86~3.25
Capacity (l/h) (Air 30°C, RH 60%) *	1.7	2.6	3.4
DER (l/h.kW) (Air 30°C, RH 60%) *	2.65~2.45	3.2~2.9	3.1~2.7
Electric heating optional (kW)	1.3	2.1	2.1
Rated power (kW) (Air 30°C, RH 80%) *	0.11~0.73	0.17~0.99	0.22~1.36
Rated current (A) (Air 30°C, RH 80%) *	0.48~3.17	0.74~4.30	0.96~5.91
Power supply	230V/1Ph/50Hz		
Sound pressure at 1 m dB(A)	38.3~45.6	40.3~45.8	39.9~46.4
Air flow (m ³ /h)	600	1000	1200
Net dimension (mm)	850×291×770	1120×291×770	1220×291×770
Net weight	53	68	72

1. The temperature of this products can only work normally within the range of 10 °C ~ 38 °C. If it exceeds this range, the performance will not be guaranteed; please note that the performance parameters of the dehumidifier will be different under different working conditions;
2. Due to the technical improvement of the product, the relevant parameters will be adjusted by steps without prior notice. Please refer to their nameplate for more details.

1. Installation and Maintenance

⚠ This product must be installed by a professional team. The users are not qualified to install by themselves, otherwise the dehumidifier might be damaged and risky for users' safety.

1.1. Notice before installation


The product is only used for dehumidification of the swimming pool and must ensure sufficient air circulation, otherwise the dehumidification function will be ineffective or have little effect.

1.1.1 When storing or moving the equipment, it should be at the upright position


1.1.2. The equipment is a general dehumidification product, NEVER use it for other flammable and turbid gases.

1.1.3. Set the temperature and humidity appropriately to get a comfortable environment.

1.1.4. Do not place objects that block the airflow nearby the air inlet or the air outlet, because it will reduce the effect of the equipment and even stop the equipment.

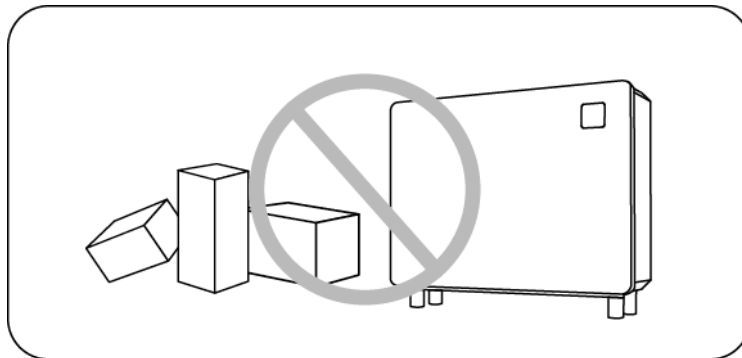


1.1.5. Do not put the hands or other objects such as sticks into the air inlet and outlet of the dehumidifier, and do not remove its appearance. Otherwise, the high speed running wind wheel may cause injury to you.

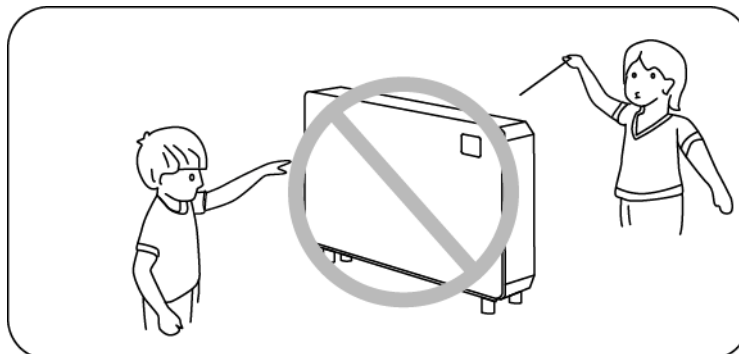


FOR INSTALLERS AND PROFESSIONALS


1.1.6. It is strictly forbidden to use or store flammable gases or liquids such as hair spray, paint, gasoline, etc. near the dehumidifier, otherwise a fire may occur.

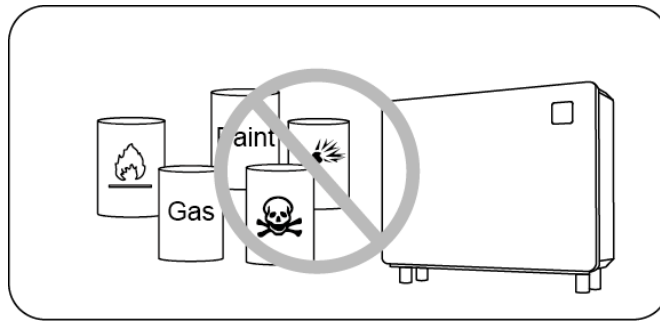


1.1.7. If any abnormal conditions such as abnormal noise, odor, smoke, leakage, etc., are found, the power should be cut off immediately and contact the local dealer, and do not repair the equipment yourself.

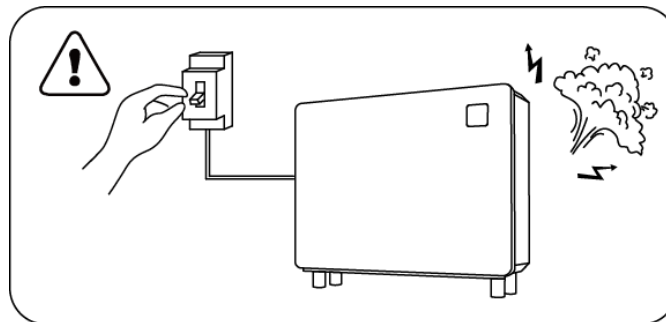

1.1.8. The main power switch should be located in a position that the child cannot reach, to prevent children from playing with the main power switch in danger.

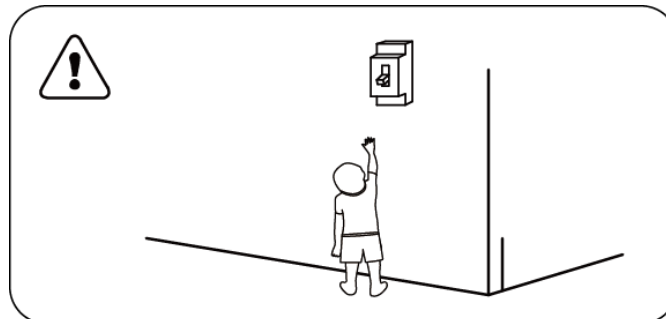


1.1.9. In thunderstorms, disconnect the main power switch, otherwise the lightning might damage the unit

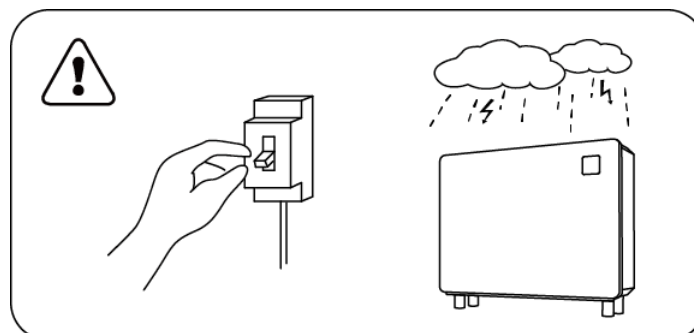


FOR INSTALLERS AND PROFESSIONALS

1.1.10. Do not wash the equipment directly with water.

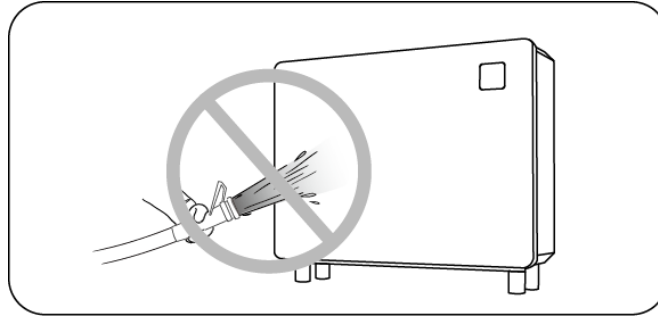


1.1.11. Do not use for special purposes such as the preservation of fine arts or academic materials (Otherwise, the quality of the preservation may be reduced).

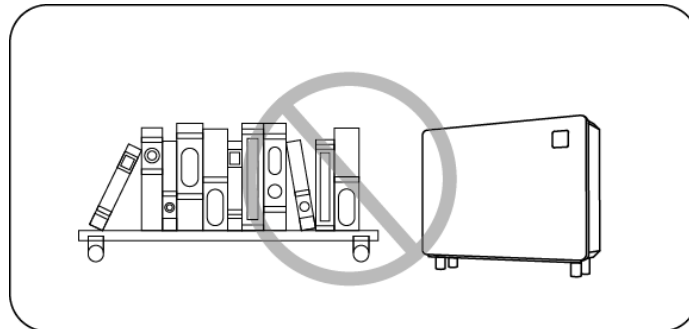


1.2 Instruction

⚠ This product should be installed in a well-ventilated place

Ambient - Floor Standing

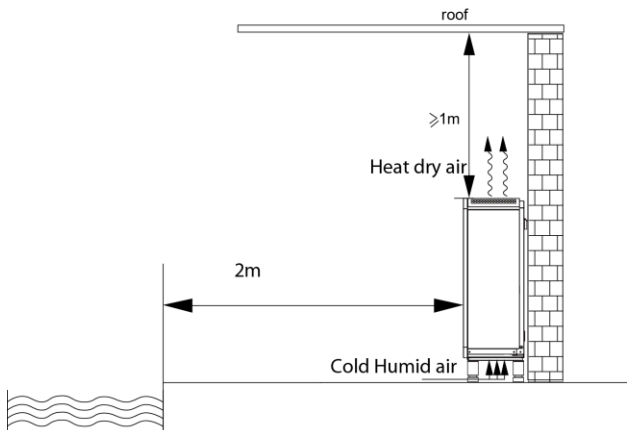

Ambient_Wall Mounted

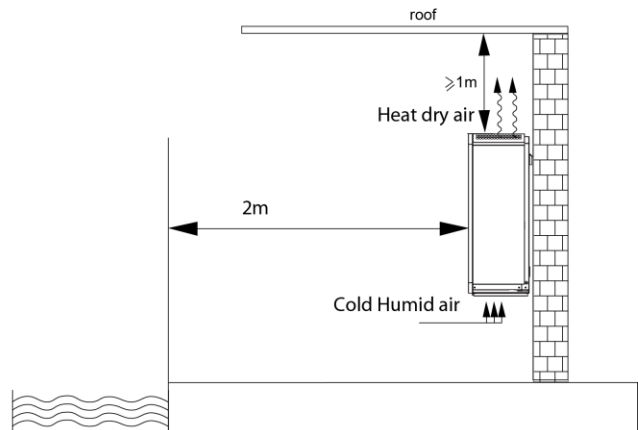

1.2.1. Installation


- 1) The dehumidifier may be placed on the ground or installed on the wall;
- 2) When installing on the wall, be sure to use M6 pull-out screws to fix the bracket, the concrete foundation of the selected wall should be firm and strong, and the bracket should be strong enough and rust-proof;
- 3) Please ensure that the dehumidifier and the swimming pool are kept at a distance of 200cm or more. Do not place objects which block the airflow near the air inlet or air outlet. Do not set any obstacles within 100cm in front of the air outlet. Otherwise, the efficiency of dehumidification will be reduced, or even the system will stop running.
- 4) When the dehumidifier is running, there will be condensed water discharged from the bottom board, please pay attention; put the drainage kit firmly into the drain hole of the bottom board, and then connect the drain pipe to drain away the condensed water smoothly.

FOR INSTALLERS AND PROFESSIONALS

Steps to install the foot and place it on the ground:

1. Align the foot to the mounting hole of the dehumidifier chassis and screw it in the clockwise direction (do not flip the equipment to install!).


A: Power Cord; B: Drain Outlet (Connected with drain pipes)

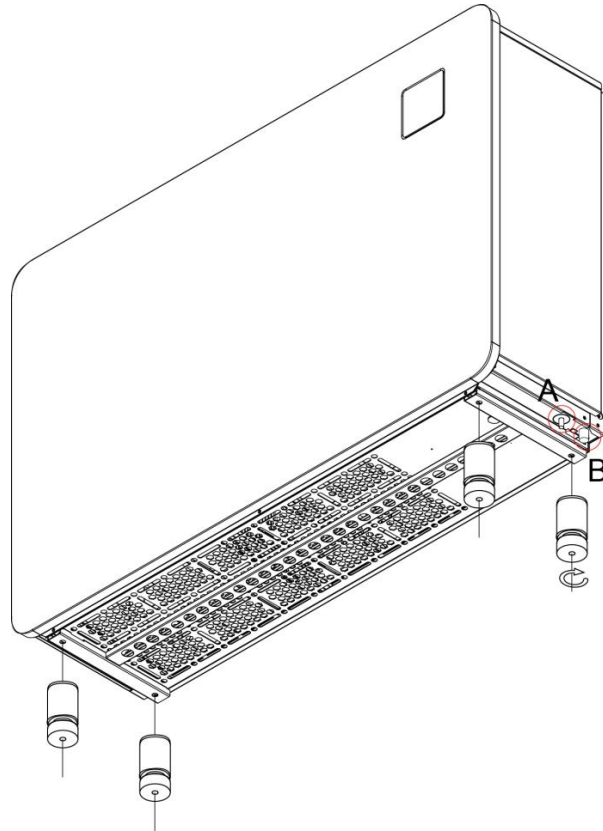


2. Connect the drain pipe and connect the power cord according to the cable diagram.

Steps of installation on the wall:


1. On the appropriate wall, mount the bracket to the wall by attaching five $\phi 6\text{mm}$ pull-out screws to the holes in the wall bracket.

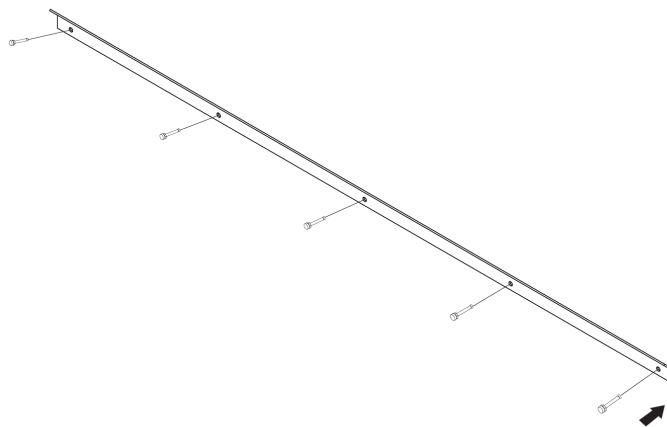

2. Place the pad on the wall-mounting platform behind the equipment

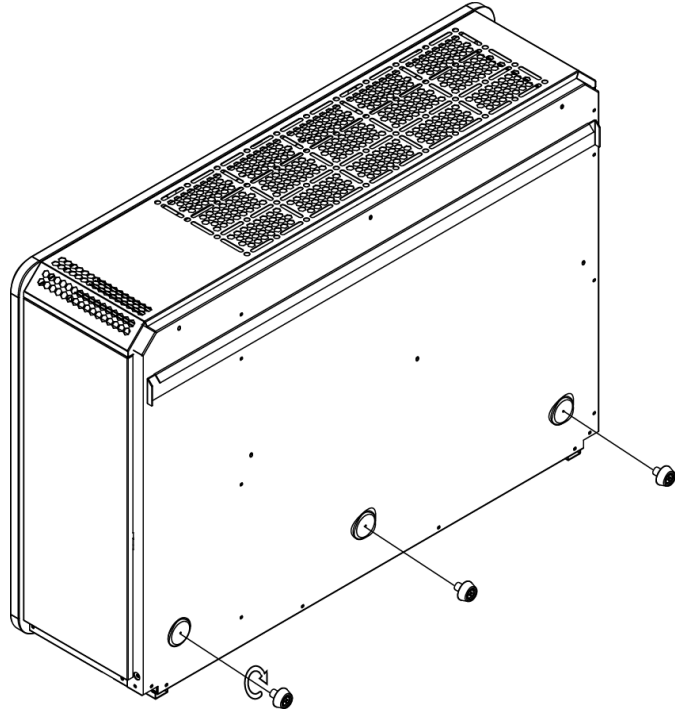


3. Hang the hanging strip on the back of the equipment on the bracket.

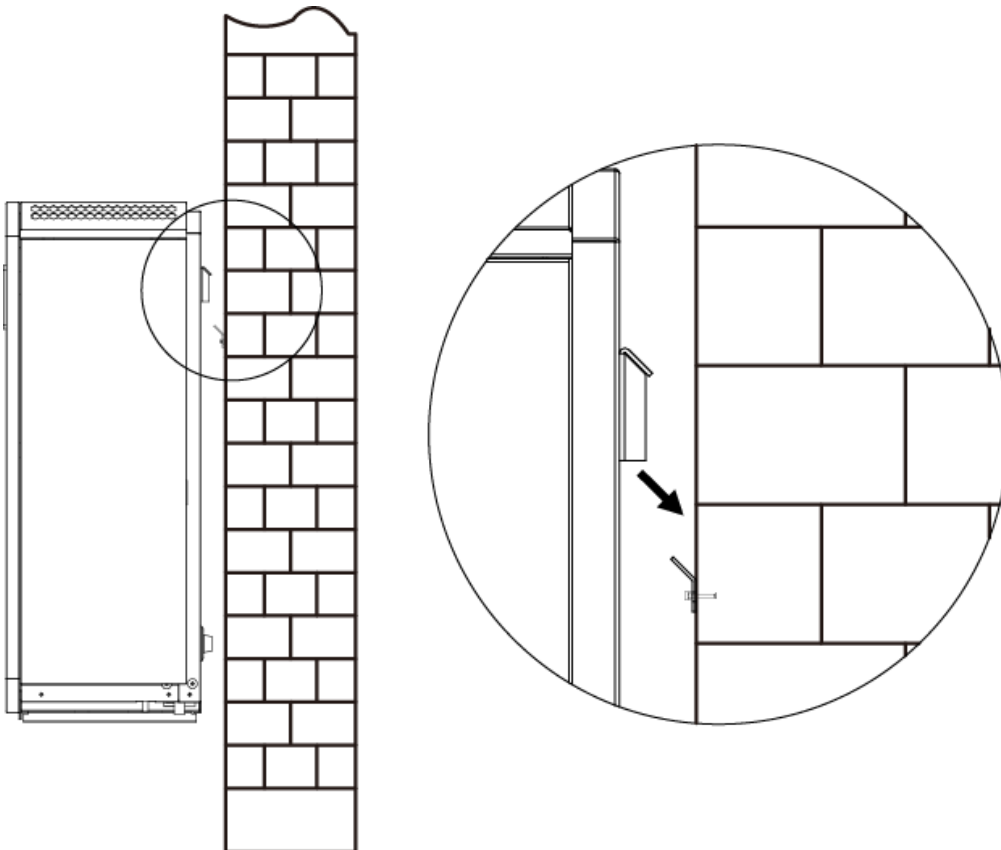


FOR INSTALLERS AND PROFESSIONALS

After hanging the bracket, gently put the equipment until the pad of the bottom rests against the wall.

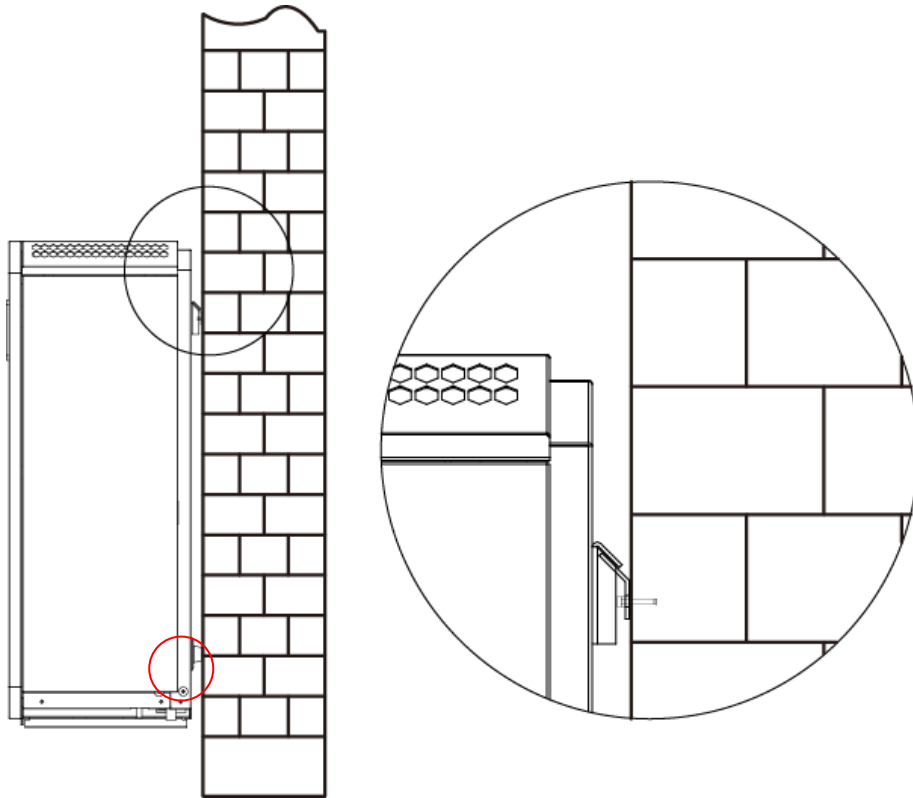

4. Connect the drain pipe, and connect the power cord according to the wiring diagram

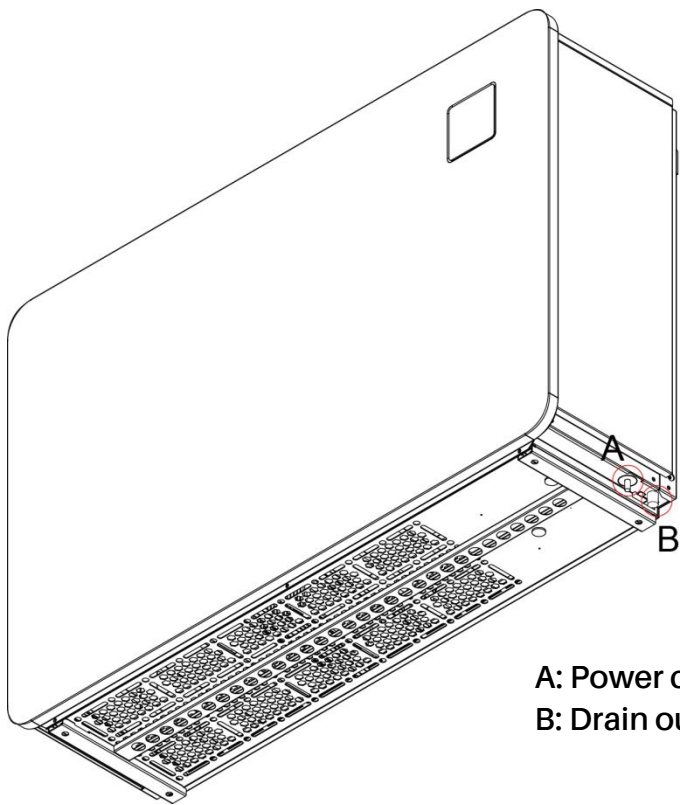


A: Power cord;
B: Drain outlet(connect the drain pipes)

1.2.2. Electrical installation wiring

- 1) Connect to appropriate power supply, the voltage should comply with the rated voltage of the products.
- 2) Dehumidifier must be well grounded.
- 3) Wiring must be connected by professional technician according to the circuit diagram.
- 4) According to the requirements of relevant electrical equipment technical standards of the local country of the user, set up leakage protection devices (leakage operating current $\leq 30\text{mA}$)
- 5) The layout of power cable and signal cable should be orderly and not affecting each other; considering the environmental condition (ambient temperature, direct sunlight, rain, power grid voltage, cable length etc.)
- 6) The cross-sectional area of the cable can be appropriately increased.
- 7) Completed all the wiring, must be checked carefully then connect the power.

⚠ Electric wiring diagram

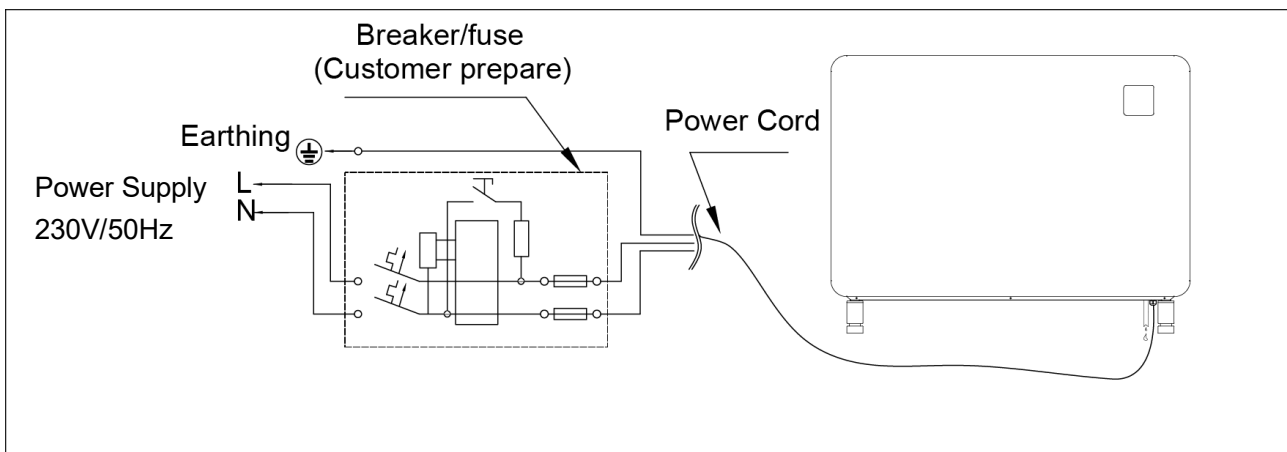

Model		OXID40E	OXID60E	OXID80E
Breaker	Rated current A	16.0	22.5	24.0
	Rated residual Action Current mA	30	30	30
Max input current A		13.0	18.5	20.0
Fuse A		16.0	22.5	24.0
Power cord (mm ²)		3x4	3x4	3x4

Note: Above data is adapted to power cord $\leq 10\text{m}$. If power cord $\geq 10\text{m}$, wire diameter must be increased.

1.3 Trail after Installation

⚠ Please check all the wirings carefully before turning on the dehumidifier.

1.3.1. Inspection before use

FOR INSTALLERS AND PROFESSIONALS

- 1) Check if the dehumidifier is vertically or horizontally placed on the ground or hung on the wall, connected with drain pipe;
- 2) Check the electric wiring according to the electrical wiring diagram and earthing connection;
- 3) Make sure that the main power is well connected;
- 4) Make sure that setting the appropriate humidity;
- 5) Check if there is any obstacle in front of the air inlet and outlet of the dehumidifier.

1.3.2. Trail

The user should open the power switch firstly then connect the power. To protect the dehumidifier, it is equipped with start delay function; When starting the dehumidifier, the fan will firstly start to run in 3 minutes, then the compressor will start running. After dehumidifier starts up, check for any abnormal noise from the dehumidifier.

1.4. Daily Maintenance Notice

 The maintenance should be carried out per year by qualified professional technician.

Cut off power supply of the dehumidifier before inspection;

Please cut off the power supply when not be used, and cover the plastic sheet use the cloth to prevent dust from entering.

Please clean the dehumidifier with the household detergents or clean water, NEVER use Volatile oil, gasoline, thinner or sassafras powder.

2. TROUBLE SHOOTING FOR COMMON FAULTS

Failure	Reason	Solution
Dehumidifier doesn't run	No power	Wait until the power recovers
	Power switch is off	Switch on the power
	Fuse burned	Check and change the fuse
	The breaker is off	Check and turn on the breaker
Fan running but insufficient heating	Evaporator blocked	Remove the obstacles
	Air outlet blocked	Remove the obstacles
	3 minutes start delay	Wait patiently
Display normal, but no dehumidification	The set humidity too low	set proper humidity
	3 minutes start delay	Wait patiently
If above solutions don't work, please contact professional installer with model number and detailed information. Don't try to repair it yourself.		


ATTENTION! Please don't try to repair the dehumidifier by yourself to avoid any risk.

3. FAILURE CODE

NO	Failure	Code
1	High pressure protection	E1
2	Low pressure protection	E2
3	Abnormal power supply voltage protection	E5
4	Electric heating overheating protection (manual reset thermostat)	E7
5	Exhaust high temp protection	E8
6	Air out high temp protection	EA
7	Environmental low temp protection	Eb
8	Controller failure	P0
9	Air inlet temperature sensor failure	P1
10	Air outlet temperature sensor failure	P2
11	Exhaust gas temp sensor failure	P3
12	Gas return temp sensor failure	P5
13	Evaporation coil temperature sensor failure	P6
14	Ambient humidity sensor failure	P7
15	Cooling plate sensor failure	P8
16	Current sensor failure	P9
17	Restart memory failure	PA
18	Compressor drive module or related wiring failure	F1
19	PFC module failure	F2
20	Compressor start failure	F3
21	Compressor running failure	F4
22	Inverter board over current protection	F5
23	Inverter board overheat protection	F6
24	Over current protection	F7
25	Radiator high temperature protection	F8
26	DC fan fault	F9
27	PFC module overcurrent protection	FA

4. WI-FI SETTING

1) APP Download

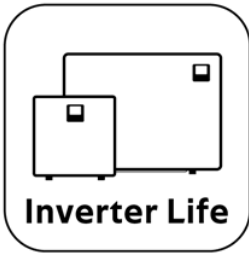

Android mobile please download from




iPhone please download from




2) Account registration

a) Registration by Cell phone number/ Email.

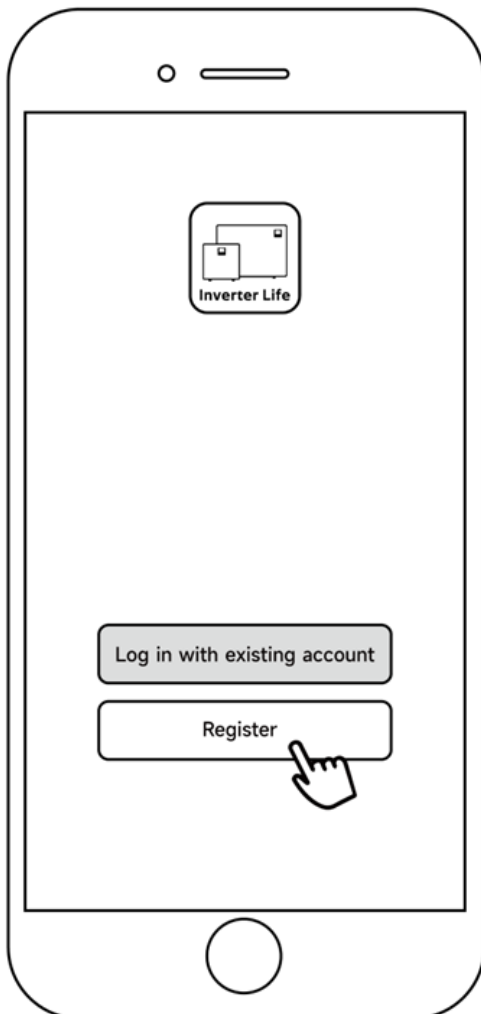


b) Cell phone number registration.

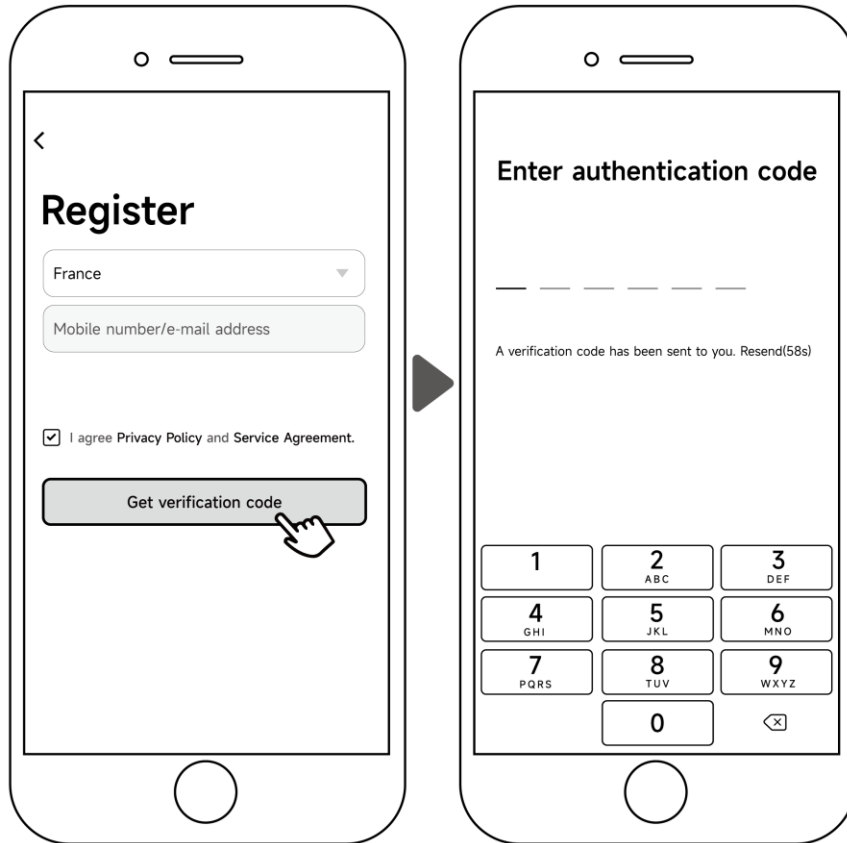

3) Create family

Please set a name for the family and choose the room of the device.

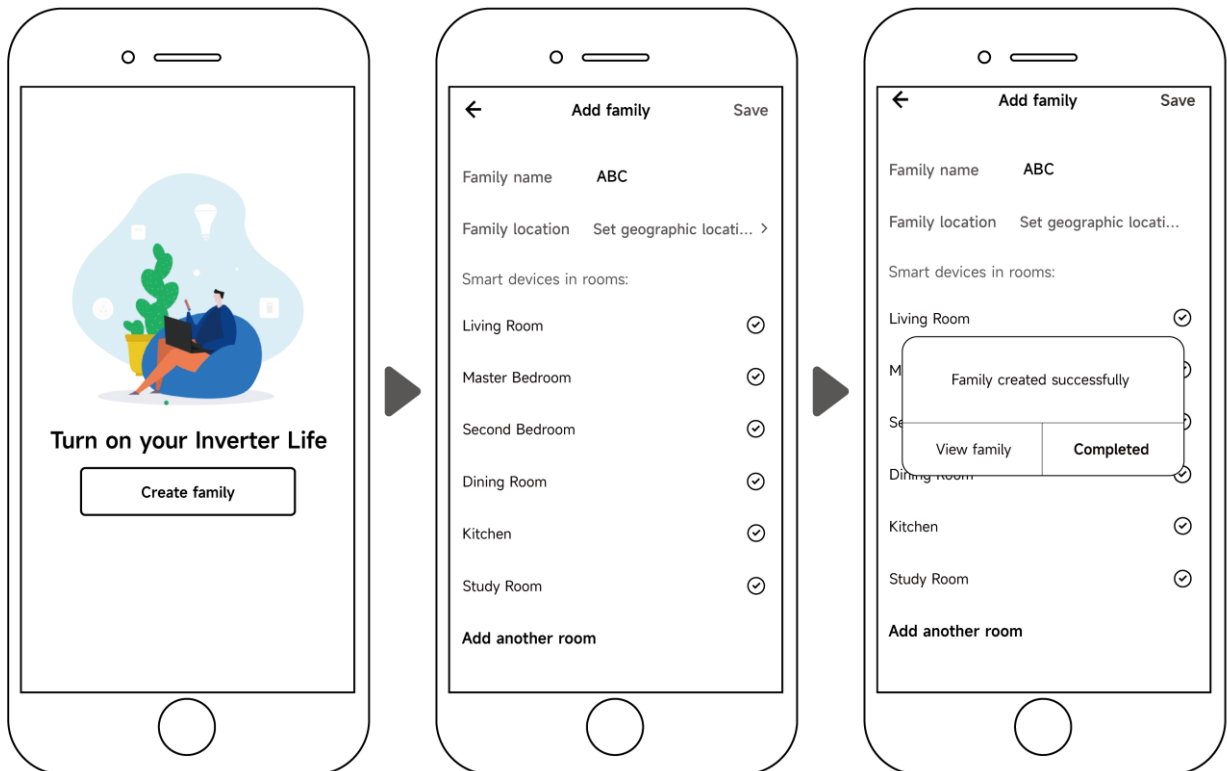




4) Three methods of device binding

Please connect your phone to the Wi-Fi network first.



4.1) Auto Discovery (Bluetooth)

- a) Please make sure the Bluetooth function is enabled on your phone.
- b) When switched on, tap any key to wake up the controller, then press  for 3 seconds, and  will be flashing rapidly to enter Wi-Fi binding status.
- c) Click "Add Device", wait for the app to search for the device and then click "add", then follow the instructions below to finish the device binding.

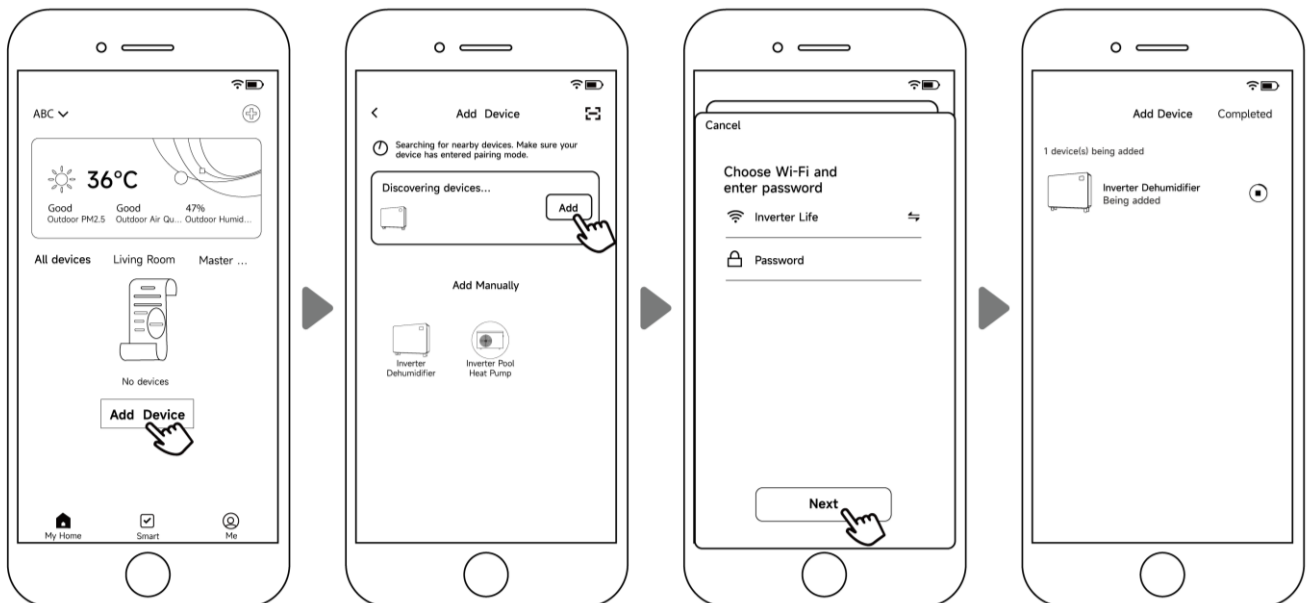




Note:


1. It will take some time to scan, please be patient.
2. Only Wi-Fi modules with Bluetooth functions can use this method.

4.2) EZ Mode (Easy-connect)

a) Activate the Wi-Fi module

When switched on, tap any key to wake up the controller, then press  for 3 seconds, and  will be flashing rapidly to enter Wi-Fi binding status.

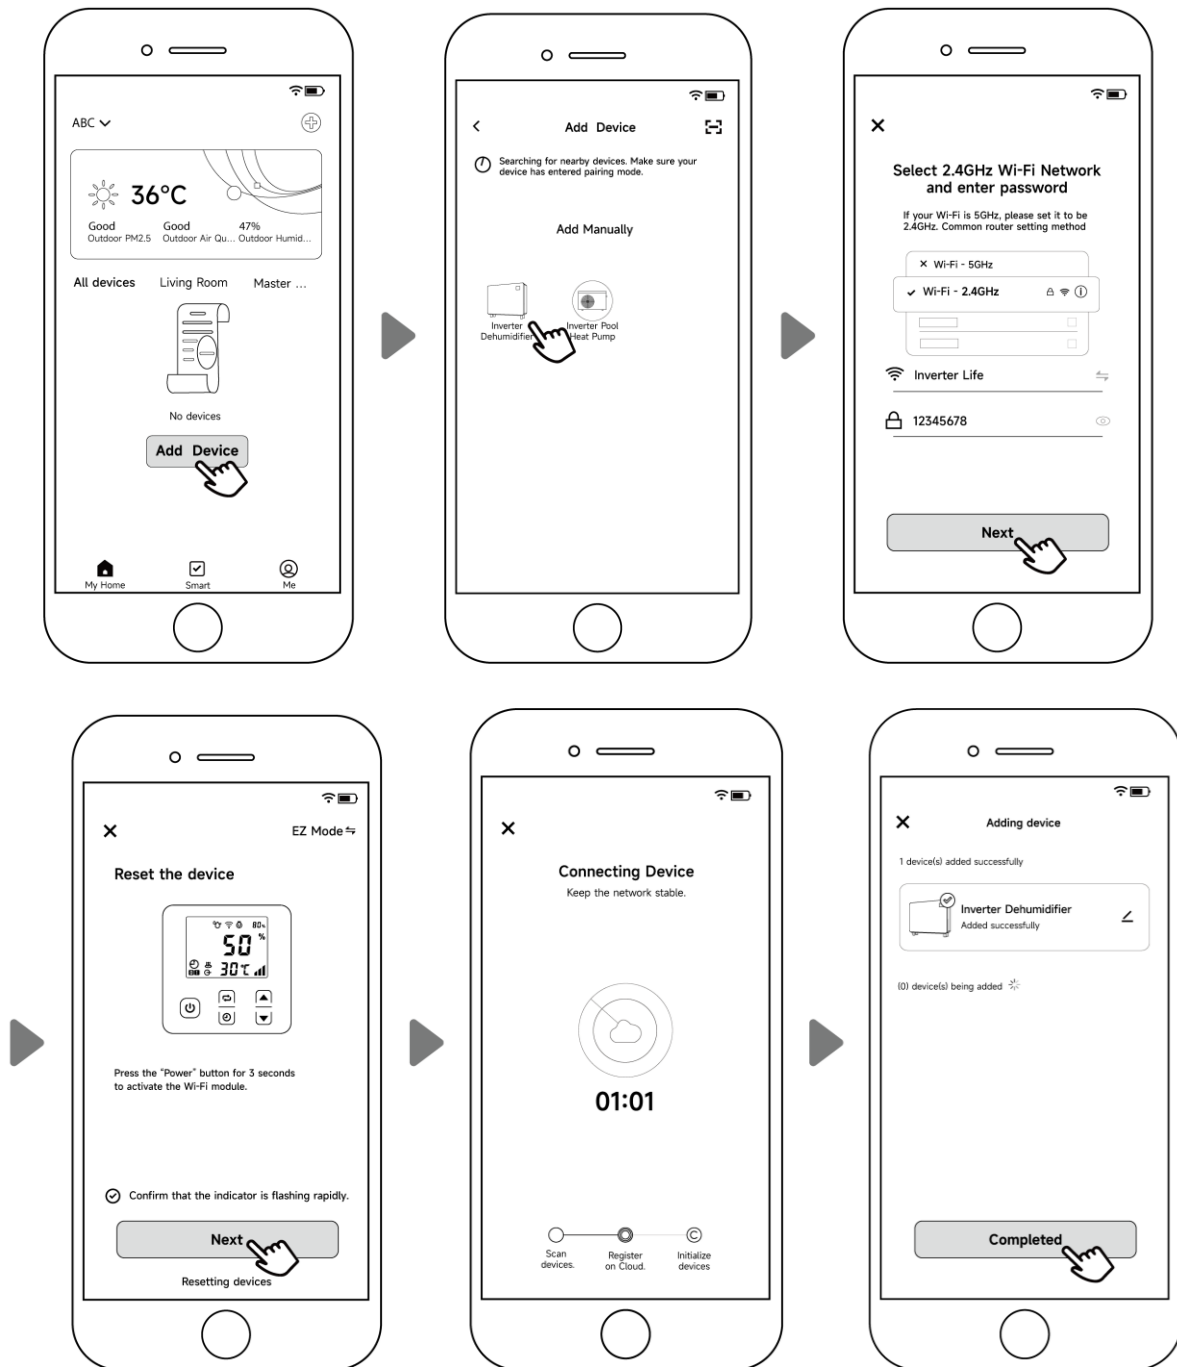


b) Click "Add device", follow instructions below to finish binding.  display on the screen once Wi-Fi connection success.



Note: After allowing the APP to locate, it can read the Wi-Fi name automatically.

4.3) AP Mode

Activate Wi-Fi module




- a) When switched on, tap any key to wake up the controller, then press  for 10 seconds, and  will be flashing slowly to enter Wi-Fi binding status.
- b) Click "Add device", follow the instructions below to finish binding.  display on the screen once Wi-Fi connection success.



Note: If it doesn't jump automatically, click "Confirm hotspot connection, next".

4.4) If connect fails, please make sure your network name and password is correct. And your router, mobile phone and device are as close as possible.


4.5) Wi-Fi rebinding (When Wi-Fi password changes or network configuration changes)

Press  for 10 seconds,  will be flashing slowly for 60 seconds. Then  will be off. The original binding will be removed. Follow steps above for rebinding.

Remarks: Please make sure the router is configured at 2.4GHz.

5) Operation instructions


The following instructions are for dehumidifiers with an electrical heater.

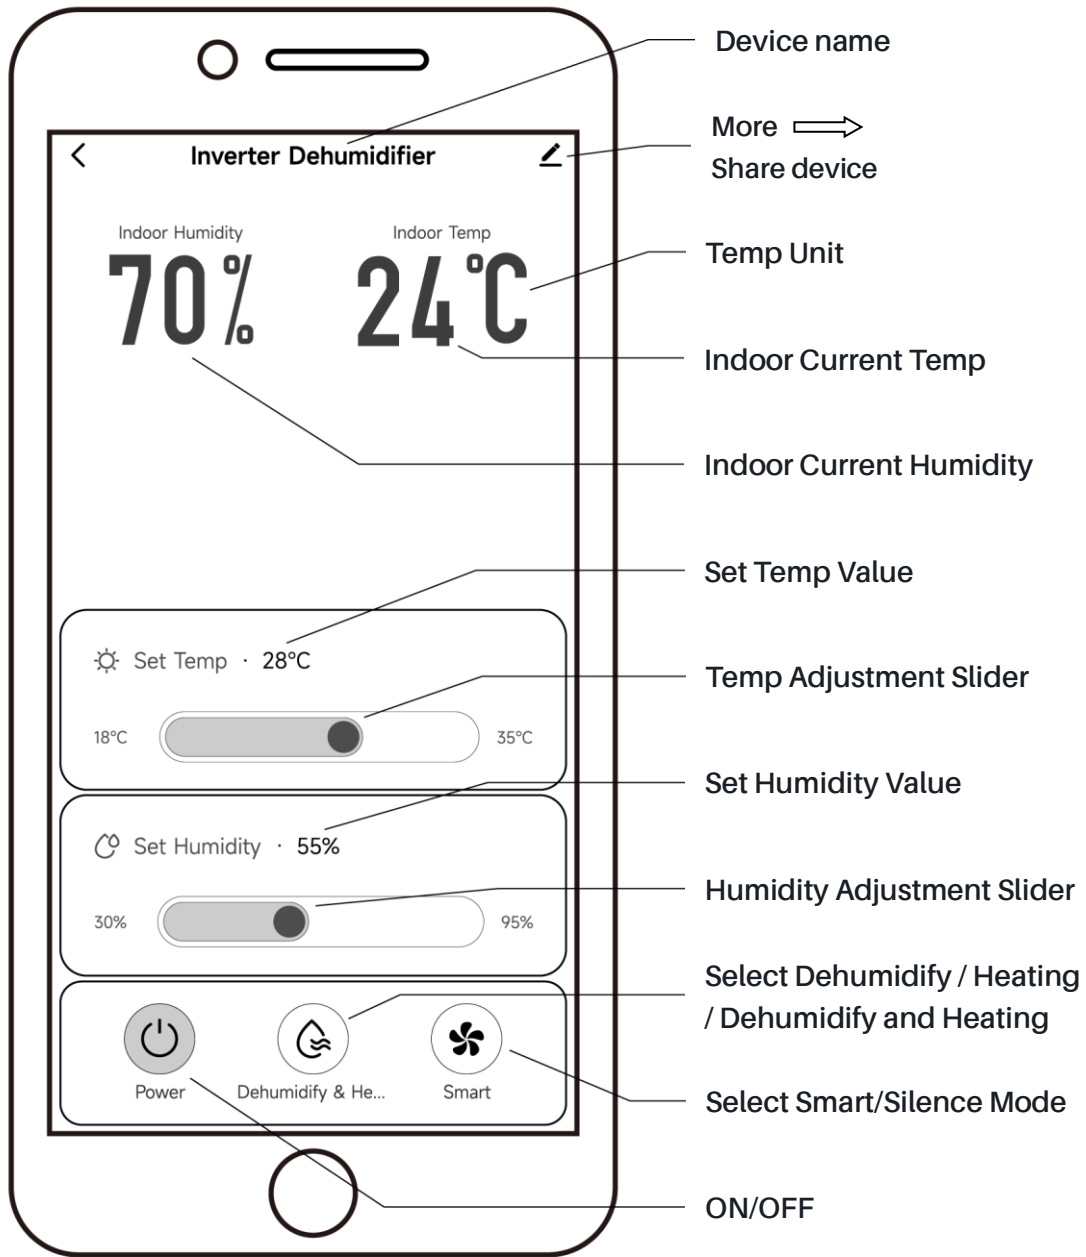

6) Share devices with your family members

After binding, if your family members also want to control the device.

Please let your family members register the APP first, and then the administrator can operate as below (The following pictures are for reference only):

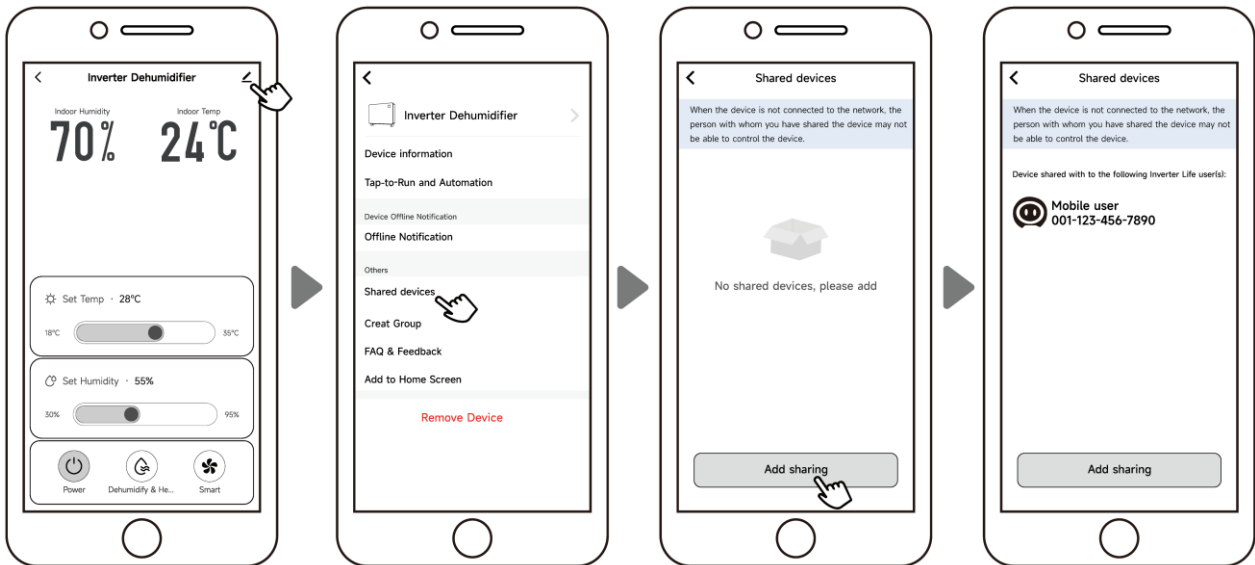

Then your family members will see this heat pump once they log in to the APP.

- Notice: 1. The weather forecast is just for reference.
2. APP is subject to update without notice.

The factory reserves the final interpretation right.

And keep the right to stop or change product specification and design without prior notice at any time, no need to bear the resulting obligations.

